SAMSUNG

QUICK START GUIDE

Samsung UHD TV
Ultra High Definition

BN68-05196A-04

Welcome to your new Smart TV!

The following instructions cover assembling, connecting, and setting up your new TV. Make sure you have the accessories listed below.

Included in this box

Smart Touch Control & Batteries (AAA x 2)

DELPHINUS

x 8 (M4 x L6)

Screw

Also included: User manual, regulatory guide, antenna cable, IR extender, component adapter, RCA adapter x 2, power cord

One Connect Accessories: One connect, one connect cable

Stand

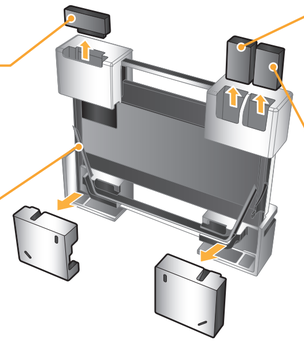

3D Glasses Accessories: 3D Active glasses, USB charge cable

Attach the TV to the Stand	Connect video devices	Using the Smart Touch Control	Power on and start the initial setup
Step 1	Step 2	Step 3	Step 4

Step 1 Attach the TV to the Stand

1A

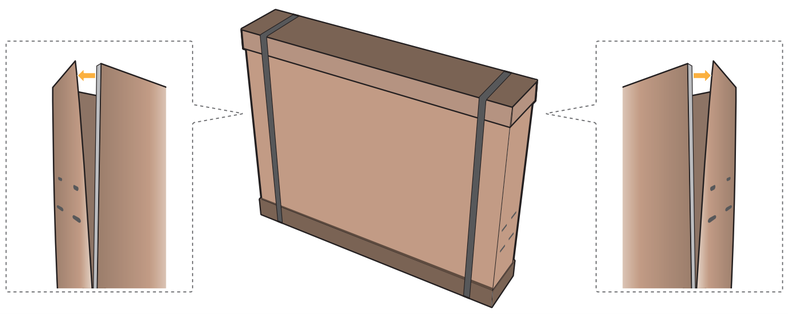

Remove the product boxes on both sides of Velcro tapes.

1B

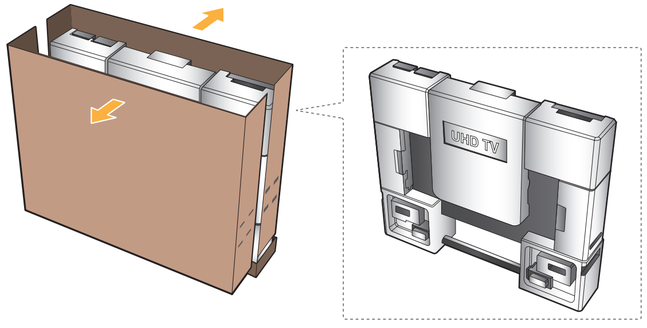

Pull apart the cardboard packaging, as shown by the figure.

1C

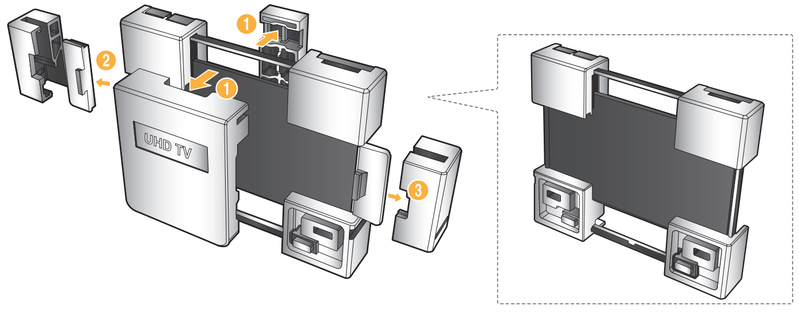

Pull the Styrofoam cushioning off of the TV in the order indicated by the figure.

1D

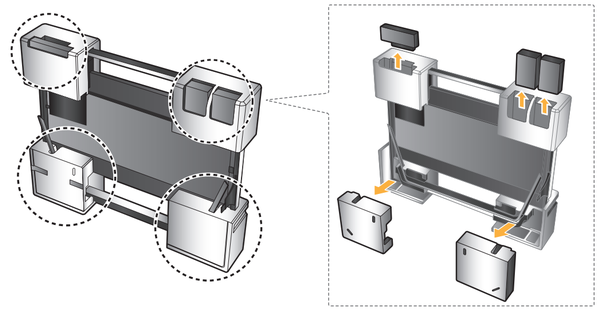

1E

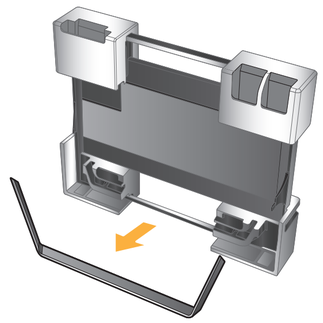

1F

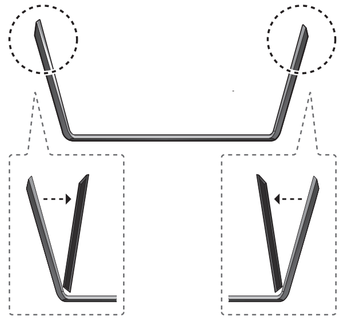

1G

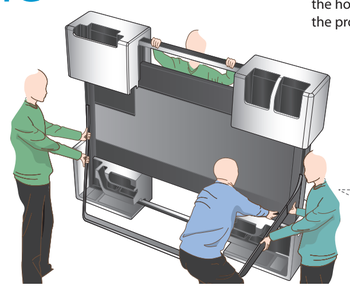

One person holding the TV in front of the TV, two people can fit into the hole in the TV. Two people stand the TV, screws into the holes of the product. Another one on screws into both sides of the TV.

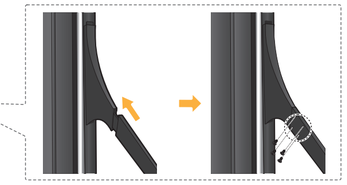

✎ Use the screws that are contained in the accessories box.

1H

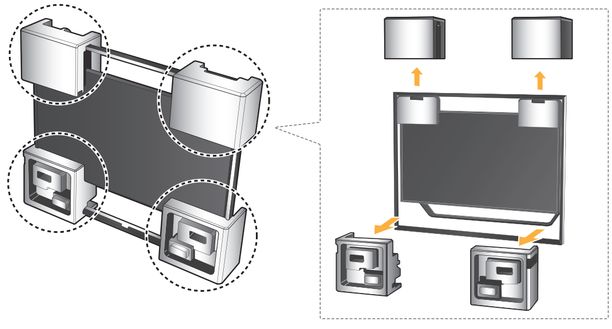

1I

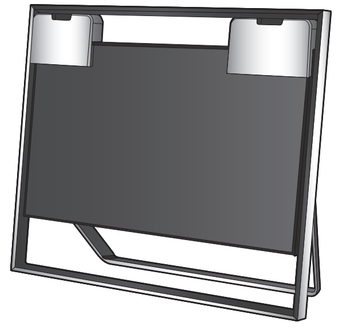

1J

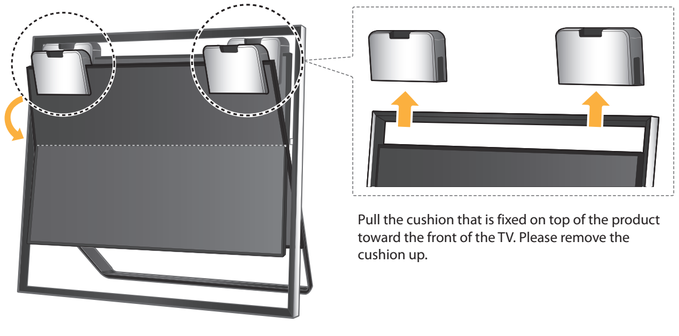

Pull the cushion that is fixed on top of the product toward the front of the TV. Please remove the cushion up.

1K

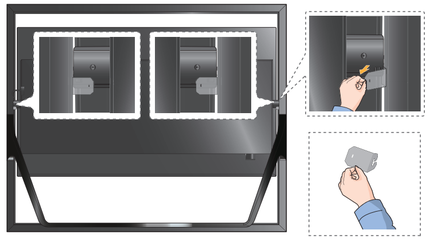

Pull the clips off of the sides of the frame.

1L

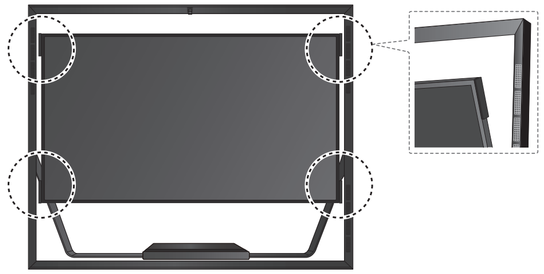

Remove the stickers from the top and bottom of TV.

1M

⚠ The connectors at both ends of the One Connect cable are different from each other in shape. When connecting the One Connect cable to the TV, make sure that the right connector is plugged into the TV. Otherwise, it may cause product failure.

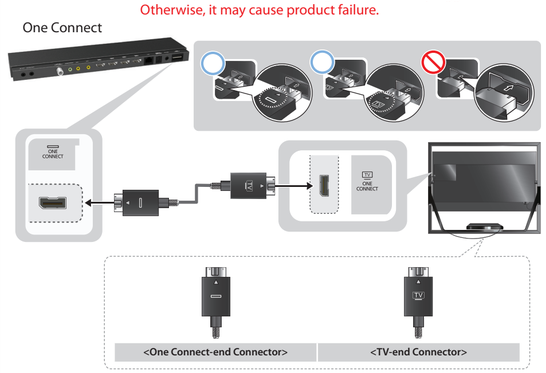

1N

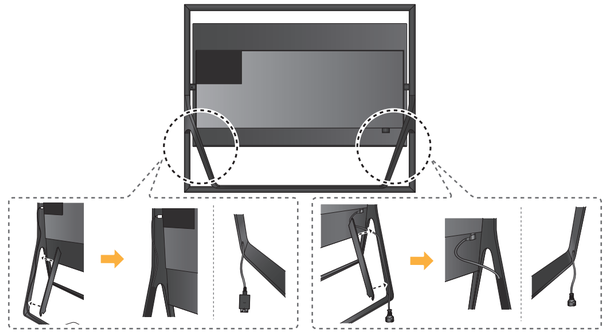

1O

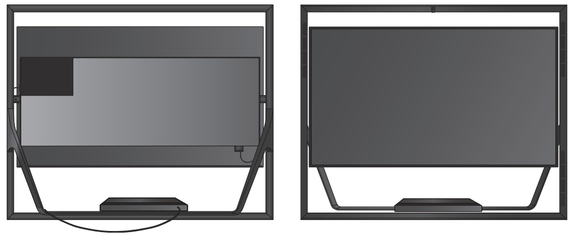

⚠ Connect One Connect to the TV, and then turn on the TV.

Installation Height & Angle Adjustment

1. Using the provided Delphinus, unlock the frame lock on either side of the product's rear middle as shown.

<TV Screen Lock>

<TV Screen Unlock>

2. Refer to the diagram and adjust the height of the TV.

<Diagram 1> Pull the product up slowly while holding it at the bottom center.

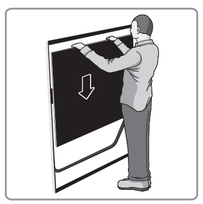

<Diagram 2> Push the product down slowly while holding it at the top center.

⚠ When moving the product, make sure there are no small children nearby. In addition, the improper handling of the product may result in injury.

3. When adjusting the height of the TV, make sure the frame ends up in the designated position.

4. Use the DELPHINUS (included) to tighten the locking devices attached to the frame on both sides and secure the TV in place.

5. Grab the middle part of the top or bottom edge of the product and push or pull to adjust the TV angle.

✎ Adjustable angles

Front angle:
- When installing the TV, the maximum height is: 2.7 ± 1.0°
- When installing the TV to the minimum height: 7.7 ± 1.0°

Rear angle: 9.5 ± 1.0°

⚠ When adjusting the TV angle, make sure there are no small children nearby. In addition, the improper handling of the product may result in injury.

Step 2 Connect video devices

We suggest using HDMI connections whenever possible for the best picture quality. Use the included AV adapter to connect older devices.

✎ Please check the shape of the plugs to avoid inserting them upside down.

✎ The appearance of your TV may differ from the images below, depending on the model.

You can connect home theater systems to the OPTICAL or AUDIO OUT ports.

Connect the cable from the antenna or cable TV outlet.

Best Connection : HDMI

We suggest using HDMI whenever possible.

HDMI 1 is the default port for a cable or satellite set-top box.

Use the other ports for Blu-ray players, game consoles, and other devices.

HDMI Cable

HDMI Port

Wired Ethernet

USB Connections

You can connect USB storage devices to the USB ports and enjoy personal photos, videos, and music.

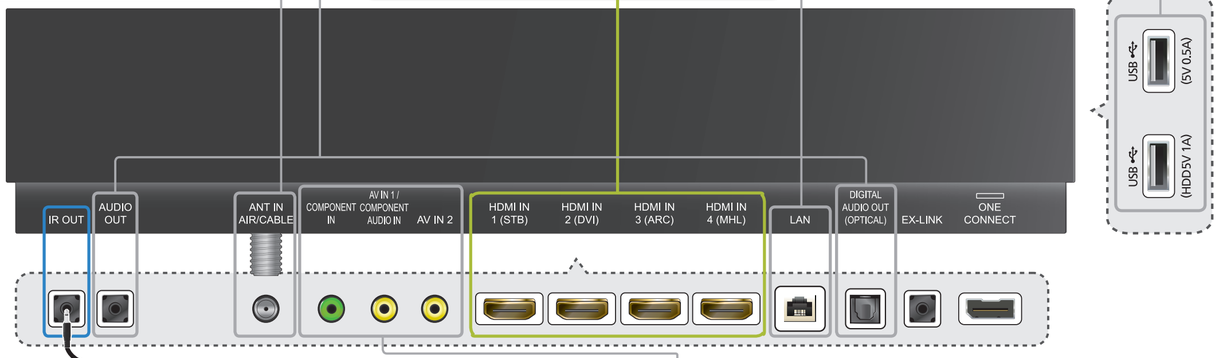

Connect the IR extender to the IR Out port to control external devices connected to the TV using the Smart Touch Control. For more detailed information, refer to the "Universal Remote Control Setup" section in the User manual.

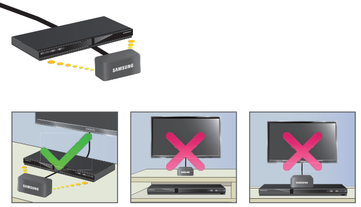

Good Connection: Component (Y, PB, PR) or AV (Composite)

Match the colors on your device's cables to the colors on the device's out ports. Connect the device's cables to the included adapters, and then connect the adapters to the appropriate ports on the TV as shown in the table below. Make sure the colors match. The Component connection is shown on the top. The AV connection is shown on the bottom.

AV IN 1		Audio (L/R)
COMPONENT IN		Video
AV IN 2		Audio (L/R) Video

Step 3 Using the Smart Touch Control

Insert the batteries into the Smart Touch Control

Insert the tip of a credit card or similar item into the notch on the side of the Smart Touch Control, and then twist the card to open and remove the remote's back cover.

✎ The notch's location may vary depending on the type of Smart Touch Control provided.

Using the touch pad

navigation	selection	scrolling
		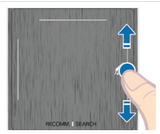
To control the highlight, move your thumb across the pad.	To select an item, press the pad until you hear a click.	Move your thumb along the ridges to quickly scroll through items.

Pairing the Smart Touch Control

If you need to reestablish the connection between the TV and the Smart Touch Control, press the pairing button at the back of the Smart Touch Control, pointing at the remote control sensor of the TV.

Congratulations on your new Smart TV!

Step 4 Power on and start the initial setup

Information required:

- Wi-Fi network password (if you use one)
- Zip code
- Cable or satellite provider info

Plug in the TV. Press the power button on the remote to turn on the TV and start the initial set-up.

✎ The TV must be connected to the Internet to use the Smart Features. If you have a wireless network, confirm that your network router is working before you start the initial setup. If you have a wired network, connect the TV to the network with a CAT 7 cable before you begin.

Troubleshooting

The stand is wobbly or crooked

Make sure the arrows on the stand are properly aligned.

The TV won't turn on

Make sure all cables are fully inserted, and that the remote has batteries installed.

I don't know where to plug in <device>

Devices without HDMI may require the included A/V adapter.

I have extra parts

The TV includes some optional parts to help with wall mounting and cable routing.

If you experience issues, please do not take the TV back to the store.

In the United States of America, call us at 1-800-SAMSUNG (1-800-726-7864) or visit us at www.samsung.com or www.samsung.com/spsn for support and warranty service.

For other countries, refer to "Contact SAMSUNG WORLDWIDE" in the user guide.